

# Your washing machine

**Congratulations** – You have opted for a modern, high-quality domestic appliance manufactured by Bosch. The washing machine is distinguished by its economical use of water and energy. Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

## Contents

■ Intended use	1
■ Programmes	1
■ Setting the programme	3
■ Washing	3/4
■ After washing	4
■ Individual settings	5
■ Select stain	6
■ Overview of programmes	7
■ Important information	8
■ Care	9
■ Information on the display panel	9
■ Maintenance	10
■ What to do if...	11
■ Customer service	12
■ Safety instructions	13
■ Consumption values	13

### Protection of the environment/Conservation tips

- Utilise the maximum amount of washing for the particular programme.
- Wash normally soiled washing without prewash.
- Instead of **Cottons 90 °C** programme, select **Cottons Eco 60 °C** and additional function **soiling intense**. Comparable cleaning result with significantly lower energy consumption.
- Meter detergent according to the manufacturer's instructions and water hardness.
- If the washing is then dried in the tumble dryer, select spin speed according to the instructions of the dryer manufacturer.

### Automatic stain removal

Automatic treatment of 14 different types of stains possible. No pretreatment of stains required – washing machine automatically adjusts itself to the washing process → Page 6.

## Intended use

- for use in the household only,
- for the washing of machine-washable textiles in a detergent solution,
- to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines.

- ⚠ Do not leave children unattended near the washing machine!
- Keep pets away from the washing machine!

### Programmes

Detailed programme overview → Page 7.

Temperature and spin speed can be selected individually, irrespective of the selected programme and programme progress.

☁ Cottons	Hard-wearing textiles
⊖ Cottons Eco	Hard-wearing textiles
Sensitive	
PowerWash 60	
☁ Easy-Care	easy care textiles
☁ Mixed Load	different types of washing
☁ Delicate/Silk	delicate washable textiles
⊗ Wool/☁	hand-/machine-washable wool
☁ Rinse/Freshen Up	extra rinse with spin
Spin	extra spin with selectable spin speed
Drain	the rinsing water with <b>Rinse Hold</b> (without final spin)
SuperQuick 15	short programme
Sportswear	textiles made of microfibres
Memory	required programme → Page 5
Memory	required programme → Page 5

## Preparation

⚠ *Correct installation according to separate Installation instructions.*

**Checking the machine**  
– Never switch on a damaged machine!  
– Inform your customer service!

**Insert mains plug**  
⚠ *With dry hands only! Take hold of the plug only!*

**Turn on the tap**

Insert for liquid detergent (depending on model), Page 8.  
● Main wash: Detergent, water softener, bleach, stain remover  
⊗ Care products: Fabric softener, impregnating agent  
● Prewash: Detergent, starch

## Sort the washing

Follow manufacturer's care information! According to the information on the care labels. According to type, colour, soiling and temperature. Do not exceed maximum load → Page 7.

Take care not to trap any items of clothing between the loading door and rubber seal.

**Detergents and cleaning products**  
Meter accordingly:  
Washing amount, soiling, water hardness (ask your water supply company) and manufacturer's instructions. Models without insert for liquid detergent: Pour liquid detergent into the appropriate dispenser and place in the drum. During operation: Caution when opening the detergent drawer!

ⓘ *Dilute viscous fabric softener and fabric conditioner with water. Prevents blockage of the overflow. Do not use detergent for programme option Rinse/Freshen up!*

## Setting the programme

**Insert washing/ Add detergent**  
ⓘ *Follow instructions on display panel!*

**Close the washing machine door**

**Individual settings**  
→ Page 5.

**Select stain → Page 6.**

**Select temperature/ spin speed setting → Page 2.**

ⓘ *All buttons are sensitive and a gentle tap is adequate! If the buttons are touched for longer, the setting options run automatically!*

## Washing



## Washing

Select Start/Pause

## Removing washing

Open washing machine door and remove washing. If **Rinse Hold** (without final spin) is active: Set programme selector to **Drain** or **Spin**. Select **Start/Pause**. Remove any foreign objects – risk of rusting.

**Turn off tap**  
Information on Aqua Stop → Installation instructions Page 7.

**Switch off**  
Set programme selector to **Off**.

**End of programme when ...**  
... finished, **Remove washing** is indicated on the display panel.

**Change programme ...**  
If you have mistakenly selected a wrong programme:  
– Reselect programme.  
– Select **Start/Pause**.

**Cancel programme ...**  
– Select **Start/Pause**.  
– Follow instructions in the display field; if required, top up washing (do not leave the door open for too long as water from the washing could run out of the open door)  
– Select **Start/Pause**.

**... or terminate**  
Programmes with high temperature:  
– Cool washing: Select **Rinse/Freshen Up**.  
– Select **Start/Pause**.  
Programmes at lower temperature:  
– Select **Spin** or **Drain**.  
– Select **Start/Pause**.

## Individual settings

Select **Options** </>  
Information on programme progress; if required, with progress or load bar



Change settings +/- available depending on selected programme

<b>Options</b>	see also programme overview
End time	When the programme is selected, the time until the programme ends is displayed. Adjustable in 1-hour steps, up to max. 24h. Keep selecting <b>Change +/-</b> buttons until required number of hours is displayed (h=hour). When the programme has started, no settings can be made.
Pre-wash	OFF – ON For heavily soiled washing. Prewash at max. 30 °C.
soiling	light – normal – intense Extend the washing time for a more intensive washing of heavily soiled items.
Select stain	Automatic treatment of heavy stains → Page 6.
Rinse Plus	Extra rinse. Prolonged programme duration. Application recommendation: in areas with very soft water. max. +3 rinse cycles
Reduced Iron	Special spin sequence with subsequent fluffing. Gentle final spin at reduced spin speed – residual moisture of the washing increased slightly. OFF – ON
Rinse Hold	After the final spin the washing remains in the water. OFF – ON
Aqua plus	Increased water level. More gentle treatment of the washing. OFF – ON
Signal	Select volume of the information signals. OFF – quiet – medium – loud – very loud
Button signal	Select volume of the button signals. OFF – quiet – medium – loud – very loud
Language	Select language of the display texts.
<b>Display symbols</b>	
Childlock/ Appliance lock	Secure washing machine to prevent inadvertent changes to the selected functions. ON/OFF: Press <b>Options</b> < button for 5 seconds. OFF – ON
Foam detection	Too much foam in the washing machine. Foam detection system active – special programme progress to reduce foam.

The programme and all settings are retained permanently under **Memory M1** and **Memory M2**.  
– Set the programme selector to **Memory M1** or **Memory M2**.  
– Select required programme with the +/- buttons.  
– Select required option with buttons </> if required change setting with the +/- buttons.  
– Select the required setting the °C ↑↓ (Temperature) and ↑↓ ⊗ (Spin) buttons.  
– Select button **Start/Pause**.

## Select stain

**The correct treatment for every stain**  
Do not let stains dry. Remove solid components beforehand. Arrange items of washing as usual and load the washing machine. Select a stain type (cannot be combined).

- A total of 14 different stains can be selected. The washing machine adjusts the washing temperature, drum movement and soaking times to the stain type. Hot or cold water, gentle or intensive washing control (thanks to the new drum structure) and a long or short soaking time ensure that a special sequence of the washing programme runs for each stain type.
- Stains can be additionally selected for all standard programmes (☁ Cottons, ⊖ Cottons Eco, ☁ Easy-Care) via the Menu buttons / Change buttons.
- The result: stains are treated optimally without the use of additional special detergents.

baby food	coffee	dirty socks
blood	cosmetics	grease + oil
egg	red wine	tea
soil + sand	chocolate	tomatoes
grass	sweat	

If soiling cannot be assigned to any of the stains offered (or if there are several stain types on one textile), the washing intensity can be changed via the soiling option (light – normal – intense). The 3-stage selection has been adjusted to the specifications of the detergent manufacturer → specifications on the detergent packets.

### Stain treatment in detail – 2 examples

egg	Soak in a lukewarm water bath, selected wash cycle at a higher water level and additional rinse cycles to remove particles.
blood	Blood is first "loosened" in cold water, then the selected washing programme starts.

For the other stains we have formulated comparable solutions in intensive studies.

## Overview of programmes

Programmes	Type of washing	max. °C	max.
☁ Cottons	Hard-wearing textiles, heat-resistant textiles made of cotton or linen	... 90	8.0 kg*
⊖ Cottons Eco	Hard-wearing textiles made of cotton or linen	... 60	
Sensitive	Hard-wearing textiles made of cotton or blended fabric	... 60	5.0 kg
PowerWash 60	Easy-care textiles made of cotton, linen, synthetic fibres or blended fabrics	... 60	3.5 kg
Easy-Care	Textiles made of cotton and easy-care textiles	... 40	
Mixed Load	For delicate, washable textiles, eg. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)	... 40	2.0 kg
Delicate/Silk	Hand or machine washable wool or rich-wool textiles		
Wool/☁	Textiles for outdoor wear		
Sportswear	Easy-care textiles made of cotton, linen, synthetic fibres or blended fabrics	... 40	
SuperQuick 15			

**Additional programmes**  
The programmes are time-controlled for lightly soiled textiles. If textiles are heavily soiled, reduce load or select option e.g. **soiling**. Programmes without prewash – pour detergent into dispenser II, programmes with prewash – divide detergent between dispensers I and II.  
\* If washing 8.0 kg of cottons and coloured, select **soil intense** option.

see also page 8

Options; information



## Important information



### Protecting the washing and the machine

- Empty pockets.
- Remove metal parts (paper clips, etc.).
- Wash delicates in the net/bag (tights, curtains, underwired bras).
- Close zips, button up covers.
- Brush sand out of pockets and collars.
- Remove curtain fittings or include in the net/bag.



### Before washing for the first time

Do not put any washing in the washing machine! Turn on the tap, fill the appliance with approx. 1 litre of water and then pour ½ measuring cup of detergent into dispenser II. Set the **Easy-Care 60 °C** programme and select **Start/Pause**. At the end of the programme set the programme selector to **Off**.

### Washing with different degrees of soiling

Light	Wash new items separately. Do not prewash. If required, select <b>soiling light</b> .
heavy	Select <b>soiling normal</b> or <b>Select stain</b> . Load less washing. If required, prewash. Select <b>soiling intense</b> or <b>Select stain</b> .



### Soaking

Load washing of the same colour  
Pour soaking agent/detergent into dispenser II according to the manufacturer's instructions. Set **Cottons 30 °C** programme and select **Start/Pause**. After approx. 10 minutes select **Start/Pause**. After the required soaking time reselect **Start/Pause**, if the programme is to be continued or change the programme.



### Starching

Washing should not be treated with fabric softener  
Dissolve an amount of starch for approx. 15 litres of water according to the manufacturer's instructions. Set programme selector to **Rinse/Freshen Up**, set spin speed and select **Start/Pause**. As soon as water runs in: Pour the starch solution into dispenser I.



### Dyeing/Bleaching

Do not dye/bleach washing in the washing machine.




### Freshen up

Use programme **Rinse/Freshen Up**  
For items, that have been tucked away or stored for a period of time, to remove creases caused by folding and storage and to eliminate odours. Use fabric conditioner for "fresh" smell.



### Insert for liquid detergent

depending on model  
Position insert for dispensing liquid detergent:  
– Completely remove the detergent drawer -> Page 9.  
– Push insert forwards.  
Do not use insert (push up):  
– for gelatinous detergents and washing powders;  
– for programmes with prewash and end time option.

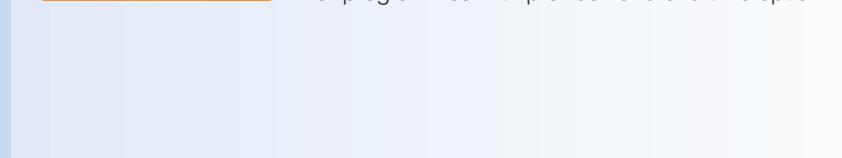

F: 23  
F: 34  
F: 42, 43, 44

## Care



 
### Machine housing, control panel

- Wipe with a soft, damp cloth.
- Do not use abrasive detergents.
- Immediately remove washing and cleaning agent residue.
- Do not clean the appliance with a water jet.

### Clean the detergent drawer ...

... if it contains detergent or fabric softener residue.

1. Pull out, depress insert, completely remove. Remove insert: Press insert upwards with finger.
2. Clean detergent dispenser and insert with water and a brush and dry.
3. Attach insert and engage (connect cylinder to guide pin).
4. Insert detergent drawer.



### Drum

Leave washing machine door open so that the drum can dry out.  
Rust stains – use chlorine-free cleaning agent, not steel wool.



### Descaling

No washing in the machine!  
Not necessary if detergent dispensed correctly. However, follow the instructions of the descaler manufacturer.

## Information on the display panel

Door open?	Close the washing machine door properly; washing may be caught.
Tap closed?	Turn on the tap, supply hose kinked/jammed; Clean filter -> Page 10; water pressure too low.
Pump blocked!	Clean detergent solution pump -> Page 10; outlet pipe/drainage hose blocked.
Pause No top-up; Water level too high or Temperature too high	Top up washing is not possible. Select "Start/Pause" to continue the programme.
F: 23	Water in the base pan, appliance leaking. Call customer service!
F: 34	Door cannot be locked. Open door and close it with an audible "click"; switch appliance off and on again; set programme and select individual settings; start programme.
F: 42, 43, 44	Motor fault. Call customer service!

## Maintenance



### Detergent solution pump

Set programme selector to **Off**, pull out the mains plug.

1. Open and remove service flap.
2. Take the drainage hose out of the holder. Remove sealing cap, allow detergent solution to flow out. Put the closing cap back on the hose.
3. Carefully unscrew the pump cover (residual water).
4. Clean the interior, pump cover thread and pump housing (fan impeller in the detergent solution pump must rotate).
5. Re-insert pump cover and screw on tight, handle is upright. Insert the drain hose into the holder.
6. Insert and close service flap.



To prevent unused detergent from flowing into the outlet during the next wash: Pour 1 litre of water into dispenser II and start the **Drain** programme.



 
### Filter in the water inlet hose

**Risk of electric shock!** Do not immerse Aqua-Stop safety device in water (contains electric valve).

- Release water pressure in the supply hose:
1. Turn off the tap!
  2. Select any programme (except Spin/Drain).
  3. Select **Start/Pause**. Leave programme for approx. 40 seconds.
  4. Set programme selector to **Off**. Pull out the mains plug.

Clean filter:

1. Depending on model: Remove hose from tap. Clean filter with small brush.
2. Connect the hose and check for leaks.



or


## What to do if ...

 - Water is running out. – Correctly attach/replace drainage hose. – Tighten screw-fitting on the supply hose.
- Water not flowing in. Detergent not washed in. – **Start/Pause** not selected? – Tap not open? – Filter blocked? Clean filter -> Page 10. – Supply hose kinked or jammed?
- Washing machine door cannot be opened. – Safety function active. Wait approx. 2 minutes. – **Rinse Hold** (without final spin) selected? -> Page 4. – Can be opened via emergency release only -> Page 12.
- Programme does not start. – **Start/Pause** or **End time** selected? – Washing machine door closed?
- Detergent solution is not drained. – Clean detergent solution pump -> Page 10. – Clean outlet pipe and/or drainage hose.
- Water not visible in the drum. – Not a fault – water below the visible area.
- Spin result not satisfactory. – Wash small and large items of washing together. – **Reduced Iron** selected? -> Page 5. – Too low speed selected? -> Page 3.
- Spin cycle actuated several times. – Not a fault – unbalanced load detection system adjusts imbalance.
- Dispenser not completely rinsed out. – Remove the insert. Clean detergent drawer and insert -> Page 9.
- Odour formation in the washing machine. – Run **Cottons 90 °C** programme without washing. Use standard detergent.
- Foam is coming out of the detergent drawer. – Too much detergent used? Mix 1 tablespoon of fabric conditioner with ½ litre of water and pour into dispenser II in the detergent drawer. – Reduce detergent dosage for the next wash cycle.
- Intense noise formation, vibrations and "wandering" during spin cycle. – Appliance feet fixed? Secure appliance feet -> Installation instructions, Page 5. – Transportation safety devices removed? Remove transportation protection devices -> Installation instructions, Page 3.
- Display panel/indicator lights do not function while the appliance is running. – Power failure? – Fuse tripped? Switch on/replace fuse. – If the fault occurs repeatedly, call customer service.
- Programme progress longer than usual. – Not a fault – unbalanced load detection system adjusts imbalance by repeatedly distributing the washing. – Not a fault – foam detection system active, a rinse cycle is started.
- Detergent residue on the washing. – Occasionally phosphate-free detergents contain water-insoluble residue. – Select **Rinse/Freshen Up** or brush the laundry after washing.
- In the pause state **Start/Pause** flashes very quickly and a signal sounds. – Water level too high. Top up washing is not possible. If required, close door immediately. – Select "Start/Pause" to continue the programme.
- If a fault cannot be rectified or a repair is required: – Set programme selector to **Off** and pull out the mains plug. – Turn off tap and call customer service -> Page 12.

## Emergency release



e.g. in the event of a power failure  
Programme continues running when the power has been restored. However, if the washing is to be removed, the door can be opened by actuating the emergency release.



**Risk of scalding!**  
The detergent solution and washing may be hot. If required, leave it to cool down. Keep hands clear of the drum if it is still rotating. Do not open the door if water can be seen through the glass.

- Turn the programme selector to **Off** and disconnect it from the power supply.
- Drain the water -> page 10.
- Pull the emergency release with a tool, the door can then be opened.

## Customer service

- Before calling customer service, please check whether you can eliminate the fault yourself. -> Page 11; What to do if ...
- If you require advice, even during the warranty period, you will incur costs for the call-out of a technician.
- You can find your nearest customer service in the enclosed list. Please give customer service the product number (E-Nr.) and the production number (FD) of the appliance.

Product number:  Production number:

These specifications can be found in the open service flap and on the rear of the appliance.

Please help by quoting the product number and production number to prevent unnecessary call-outs. This will save you additional costs.

Product number: \_\_\_\_\_ Production number: \_\_\_\_\_

Please help by quoting the product number and production number to prevent unnecessary call-outs. This will save you additional costs.

Product number: \_\_\_\_\_ Production number: \_\_\_\_\_

Please help by quoting the product number and production number to prevent unnecessary call-outs. This will save you additional costs.

Product number: \_\_\_\_\_ Production number: \_\_\_\_\_

Please help by quoting the product number and production number to prevent unnecessary call-outs. This will save you additional costs.

Product number: \_\_\_\_\_ Production number: \_\_\_\_\_

Please help by quoting the product number and production number to prevent unnecessary call-outs. This will save you additional costs.

## Safety instructions



– Read and follow the operating and installation instructions and all other information enclosed with the washing machine.

– Retain documents for subsequent use.

**Risk of electric shock**  
– Never pull out the mains plug by tugging the power cord!  
– Never insert/pull out the mains plug with damp hands.

**Danger to life**  
Redundant appliances:  
– Pull out the mains plug.  
– Sever the power cord and discard together with the plug.  
– Destroy the lock on the washing machine door. This will prevent children from locking themselves in and suffocating.

**Risk of suffocation**  
– Keep packaging, plastic film and packaging parts out of the reach of children.

**Risk of poisoning**  
**Risk of explosion**  
– Keep detergents and care products out of the reach of children.  
– Caused by detergents containing solvents, e.g. stain remover/items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine. Before hand thoroughly rinse items of washing by hand.

**Risk of injury**  
– Washing machine door may become very hot.  
– Caution when draining hot detergent solution.  
– Do not climb on the washing machine.  
– Do not lean on the open washing machine door.  
– Do not touch the drum in case it is still spinning.

– Do not touch the drum in case it is still spinning.

– Do not touch the drum in case it is still spinning.

– Do not touch the drum in case it is still spinning.

– Do not touch the drum in case it is still spinning.

– Do not touch the drum in case it is still spinning.

– Do not touch the drum in case it is still spinning.

– Do not touch the drum in case it is still spinning.

– Do not touch the drum in case it is still spinning.


– Do not touch the drum in case it is still spinning.

– Do not touch the drum in case it is still spinning.

– Do not touch the drum in case it is still spinning.

– Do not touch the drum in case it is still spinning.

– Do not touch the drum in case it is still spinning.

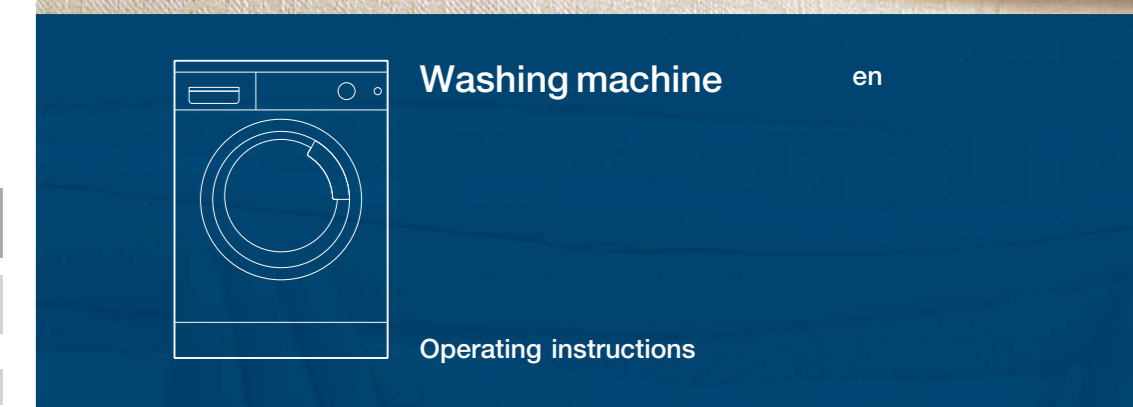

**Read these instructions before switching on the washing machine!**  
**Also follow the separate Installation instructions.**  
**Follow the safety instructions on page 13!**



# Your washing machine

**Congratulations** – You have opted for a modern, high-quality domestic appliance manufactured by Bosch. The washing machine is distinguished by its economical use of water and energy.

Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

## Contents

Page

Intended use	1
Programmes	1
Setting the programme	3
Washing	3/4
After washing	4
Individual settings	5
Select stain	6
Overview of programmes	7
Important information	8
Care	9
Information on the display panel	9
Maintenance	10
What to do if ...	11
Customer service	12
Safety instructions	13
Consumption values	13



### Protection of the environment/ Conservation tips

- Utilise the maximum amount of washing for the particular programme.
- Wash normally soiled washing without prewash.
- Instead of **Cottons 90 °C** programme, select **E Cottons Eco 60 °C** and additional function **soiling intense**. Comparable cleaning result with significantly lower energy consumption.
- Meter detergent according to the manufacturer's instructions and waterhardness.
- If the washing is then dried in the tumble dryer, select spin speed according to the instructions of the dryer manufacturer.

### Automatic stain removal

Automatic treatment of 14 different types of stains possible. No pretreatment of stains required – washing machine automatically adjusts itself to the washing process → Page 6.

## Intended use

- for use in the household only,
- for the washing of machine-washable textiles in a detergent solution,
- to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines.

- Do not leave children unattended near the washing machine!
- Keep pets away from the washing machine!

## Programmes

Detailed programme overview → Page 7.

Temperature and spin speed can be selected individually, irrespective of the selected programme and programme progress.

Cottons	....	} Hard-wearing textiles
Cottons Eco	....	
Sensitive	....	
PowerWash 60	....	
Easy-Care	....	easy care textiles
Mixed Load	....	different types of washing
Delicate/Silk	....	delicate washable textiles
Wool	....	hand-/machine-washablewool
Rinse/ Freshen Up	....	extra rinse with spin
Spin	....	extra spin with selectable spin speed
Drain	....	the rinsing water with <b>Rinse Hold</b> (without final spin)
SuperQuick 15	....	short programme
Sportswear	....	textiles made of microfibres
Memory M1	....	required programme → Page 5
Memory M2	....	required programme → Page 5

## Preparation

- Correct installation according to separate Installation instructions.

### Checking the machine

- Never switch on a damaged machine!
- Inform your customer service!

### Insert mains plug

- With dry hands only!
- Take hold of the plug only!

### Turn on the tap

Insert for liquid detergent (depending on model), Page 8.

- Main wash: Detergent, water softener, bleach, stain remover
- Care products: Fabric softener, impregnating agent
- Prewash: Detergent, starch

**Display panel/  
Options buttons/Change buttons**

**Programme**

- Memory M1
- Memory M2
- Sportswear
- Sensitive
- PowerWash 60
- SuperQuick 15
- Drain

**—, 30° – 90° °C** ↑↓ (Temperature)  
Select the temperature (— = cold)

**0, 400 – 1600\*** ↑↓ Ⓞ (Spin)  
Select the spin speed (\*depending on model) (0 = no spin during programme progress)

**i** Programme switching off and programme in either

Before washing for the first time,  
wash once without any washing -> Page 8.

### Sort the washing

Follow manufacturer's care information!  
According to the information on the care labels.  
According to type; colour; soiling and temperature.  
Do not exceed maximum load -> Page 7.

Follow Important instructions -> Page 8!


Insert large and small items of washing!  
Take care not to trap any items of clothing between the loading door and rubber seal.

### Detergents and cleaning products

Meter accordingly:  
Washing amount, soiling, water hardness (ask your water supply company) and manufacturer's instructions.  
Models without insert for liquid detergent: Pour liquid detergent into the appropriate dispenser and place in the drum.  
During operation: Caution when opening the detergent drawer!

**i** Dilute viscous fabric softener and fabric conditioner with water. Prevents blockage of the overflow.  
Do not use detergent for programme option **Rinse/Freshen up!**

### Setting the programme

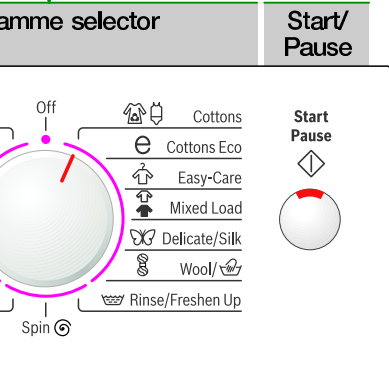

### Insert washing/ Add detergent

**i** Follow instructions on display panel!

### Close the washing machine door


### Individual settings -> Page 5.

Select stain -> Page 6.

Select temperature/  
spin speed setting -> Page 2.

**i** All buttons are sensitive and a gentle tap is adequate!  
If the buttons are touched for longer, the setting options run automatically!

# Washing

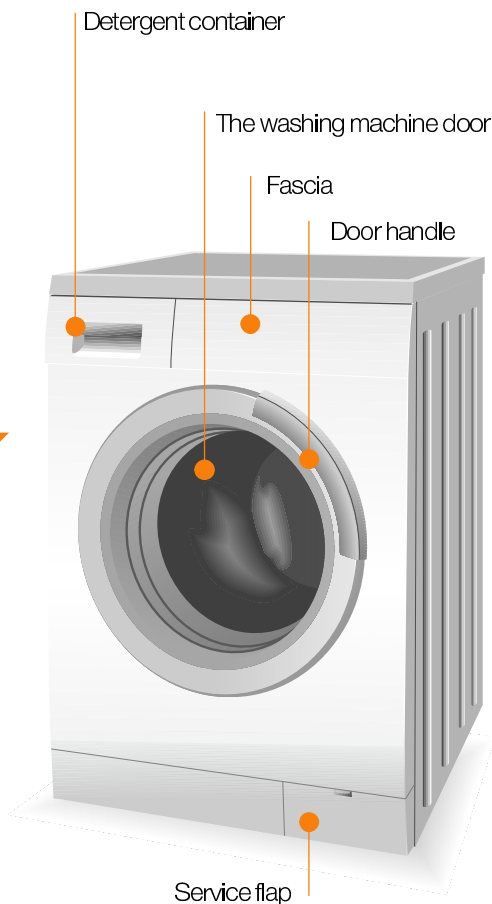

# Washing

Select Start/Pause



### Removing washing

Open washing machine door and remove washing.  
If **Rinse Hold** (without final spin) is active:  
Set programme selector to **Drain** or **Spin** .  
Select **Start/Pause** .

### Turn off tap

Information on Aqua Stop -> Installation instructions Page 7.

### Switch off

Set programme selector to **Off**.

### End of programme when ...

... finished, **Remove washing** is indicated on the display panel.

### Change programme ...

If you have mistakenly selected a wrong programme:  
- Reselect programme.  
- Select **Start/Pause** .

### Cancel programme ...

- Select **Start/Pause** .

- Follow instructions in the display field;  
if required, top up washing (do not leave the door open for too long as water from the washing could run out of the open door)

- Select **Start/Pause** .

### ... or terminate

Programmes with high temperature:  
- Cool washing: Select **Rinse/Freshen Up**.  
- Select **Start/Pause** .


Programmes at lower temperature:  
- Select **Spin** or **Drain** .

- Select **Start/Pause** .

# Individual settings

Select **Options** </>

Information on programme progress; if required, with progress or load bar

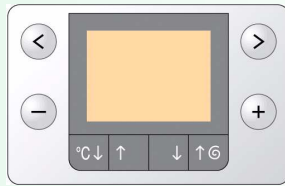

Change settings -/+ available depending on selected programme

## Options

see also programme overview

End time	When the programme is selected, the time until the programme ends is displayed. Adjustable in 1-hour steps, up to max. 24h. Keep selecting <b>Change -/+</b> buttons until required number of hours is displayed (h=hour). When the programme has started, no settings can be made.
Pre-wash  OFF – ON	For heavily soiled washing. Prewash at max. 30 °C.
soiling <i>light</i> – <i>normal</i> – <i>intense</i>	Extend the washing time for a more intensive washing of heavily soiled items.
Select stain	Automatic treatment of heavy stains → Page 6.
Rinse Plus  max. +3 rinse cycles	Extra rinse. Prolonged programme duration. Application recommendation: in areas with very soft water.
Reduced Iron  OFF – ON	Special spin sequence with subsequent fluffing. Gentle final spin at reduced spin speed – residual moisture of the washing increased slightly.
Rinse Hold  OFF – ON	After the final spin the washing remains in the water.
Aqua plus  OFF – ON	Increased water level. More gentle treatment of the washing.
Signal	Select volume of the information signals. OFF – quiet – medium – loud – very loud
Button signal	Select volume of the button signals. OFF – quiet – medium – loud – very loud
Language	Select language of the display texts.

## Display symbols

Childlock/ Appliance lock  OFF – ON	Secure washing machine to prevent inadvertent changes to the selected functions. ON/OFF: Press <b>Options</b> < button for 5 seconds.
Foam detection	Too much foam in the washing machine. Foam detection system active – special programme progress to reduce foam.

## Required programme

- The programme and all settings are retained permanently under **Memory M1** and **Memory M2**:
- Set the programme selector to **Memory M1** or **Memory M2**.
  - Select required programme with the **- /+** buttons.
  - Select required option with buttons </> if required change setting with the **- /+** buttons.
  - Select the required setting the **°C** (Temperature) and (Spin) buttons.
  - Select button **Start/Pause** .

# Select stain



## The correct treatment for every stain

Do not let stains dry. Remove solid components beforehand. Arrange items of washing as usual and load the washing machine. Select a stain type (cannot be combined).

A total of 14 different stains can be selected. The washing machine adjusts the washing temperature, drum movement and soaking times to the stain type. Hot or cold water, gentle or intensive washing control (thanks to the new drum structure) and a long or short soaking time ensure that a special sequence of the washing programme runs for each stain type.

Stains can be additionally selected for all standard programmes ( Cottons, Cottons Eco, Easy-Care) via the Menu buttons / Change buttons.

The result: stains are treated optimally without the use of additional special detergents.

baby food	coffee	dirty socks
blood	cosmetics	grease + oil
egg	red wine	tea
soil + sand	chocolate	tomatoes
grass	sweat	

If soiling cannot be assigned to any of the stains offered (or if there are several stain types on one textile), the washing intensity can be changed via the *soiling* option (*light* – *normal* – *intense* ) The 3-stage selection has been adjusted to the specifications of the detergent manufacturers → specifications on the detergent packets.

## Stain treatment in detail – 2 examples

 



 





egg	Soak in a lukewarm water bath, selected wash cycle at a higher water level and additional rinse cycles to remove particles.
blood	Blood is first "loosened" in cold water, then the selected washing programme starts.

For the other stains we have formulated comparable solutions in intensive studies.


# Overview of programmes

 see also page 8

**Programmes** °C max.     **Options; information**

Programme	°C	max.	Type of washing	Hard-wearing textiles, heat-resistant textiles made of cotton or linen	Hard-wearing textiles made of cotton or linen	Hard-wearing textiles made of cotton or blended fabric	Easy-care textiles made of cotton, linen, synthetic fibres or blended fabrics	Textiles made of cotton and easy-care textiles	For delicate, washable textiles, eg. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)	Hand or machine washable wool or rich-wool textiles	Textiles for outdoor wear	Easy-care textiles made of cotton, linen, synthetic fibres or blended fabrics
 <b>Cottons</b>	-- ... 90											
 <b>Cottons Eco</b>		8,0 kg*										
 <b>Sensitive</b>	-- ... 60											
 <b>PowerWash 60</b>	-- ... 60	5,0 kg										
 <b>Easy-Care</b>	-- ... 60	3,5 kg										
 <b>Mixed Load</b>	-- ... 40											
 <b>Delicate/Silk</b>	-- ... 40											
 <b>Wool</b>		2,0 kg										
 <b>Sportswear</b>												
 <b>SuperQuick 15</b>	-- ... 40											
<b>Additional programmes</b>												

 The programmes are time-controlled for lightly soiled textiles. If textiles are heavily soiled, reduce load or select option e.g. **soiling**. Programmes without prewash – pour detergent into dispenser **II**; programmes with prewash – divide detergent between dispensers **I** and **II**.

\* If washing 8,0 kg of cottons and coloured, select **soil intense**  option.

For further information and a selection of our products go to our web site:  
<http://www.boschappliances.com.au> or contact our customer service centres.

Robert Bosch Hausgeräte GmbH  
 Carl-Wery-Str. 34  
 81739 München/Germany

9000 236 909  
 0507  
 WAS32740AU



## Important information



### Protecting the washing and the machine

- Empty pockets.
- Remove metal parts (paper clips, etc.).
- Wash delicates in the net/bag (tights, curtains, underwired bras).
- Close zips, button up covers.
- Brush sand out of pockets and collars.
- Remove curtain fittings or include in the net/bag.



### Before washing for the first time,

Do not put any washing in the washing machine! Turn on the tap, fill the appliance with approx. 1 litre of water and then pour ½ measuring cup of detergent into dispenser II. Set the **Easy-Care 60 °C** programme and select **Start/Pause** . At the end of the programme set the programme selector to **Off**.



### Washing with different degrees of soiling

	Wash new items separately.
Light	Do not prewash. If required, select <b>soiling light</b> . Select <b>soiling normal</b> or <b>Select stain</b> .
heavy	Load less washing. If required, prewash. Select <b>soiling intense</b> or <b>Select stain</b> .



### Soaking *Load washing of the same colour*

Pour soaking agent/detergent into dispenser II according to the manufacturer's instructions. Set **Cottons 30 °C** programme and select **Start/Pause** . After approx. 10 minutes select **Start/Pause** . After the required soaking time reselect **Start/Pause** , if the programme is to be continued or change the programme.



### Starching *Washing should not be treated with fabric softener*

Dissolve an amount of starch for approx. 15 litres of water according to the manufacturer's instructions. Set programme selector to **Rinse/Freshen Up**, set spin speed and select **Start/Pause** . As soon as water runs in: Pour the starch solution into dispenser I.



### Dyeing/Bleaching

Do not dye/bleach washing in the washing machine.




### Freshen up *Use programme Rinse/Freshen Up*

For items, that have been tucked away or stored for a period of time, to remove creases caused by folding and storage and to eliminate odours. Use fabric conditioner for "fresh" smell.



### Insert for liquid detergent *depending on model*

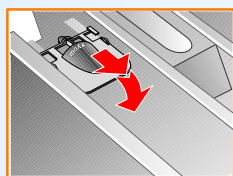

- Position insert for dispensing liquid detergent:
- Completely remove the detergent drawer → Page 9.
  - Push insert forwards.
- Do not use insert (push up):
- for gelatinous detergents and washing powders;
  - for programmes with prewash and end time option.

## Care



- Risk of electric shock! Pull out the mains plug!
- Risk of explosion! No solvents!



### Machine housing, control panel



- Wipe with a soft, damp cloth.
- Do not use abrasive detergents.
- Immediately remove washing and cleaning agent residue.
- Do not clean the appliance with a water jet.



### Clean the detergent drawer ...

... if it contains detergent or fabric softener residue.

1. Pull out, depress insert, completely remove. Remove insert: Press insert upwards with finger.
2. Clean detergent dispenser and insert with water and a brush and dry.
3. Attach insert and engage (connect cylinder to guide pin).
4. Insert detergent drawer.

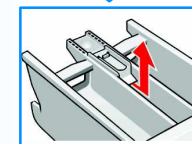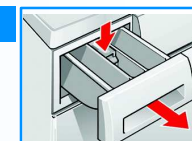

Leave detergent drawer open so that residual water can evaporate.



### Drum

Leave washing machine door open so that the drum can dry out. Rust stains – use chlorine-free cleaning agent, not steel wool.



### Descaling *No washing in the machine!*

Not necessary if detergent dispensed correctly. However, follow the instructions of the descaler manufacturer.

## Information on the display panel *depending on model*

Door open?	Close the washing machine door properly; washing may be caught.
Tap closed?	Turn on the tap, supply hose kinked/jammed; Clean filter → Page 10; water pressure too low.
Pump blocked!	Clean detergent solution pump → Page 10; outlet pipe/drainage hose blocked.
Pause No top-up; Water level too high or Temperature too high	Top up washing is not possible. Select "Start/Pause" to continue the programme.
F: 23	Water in the base pan, appliance leaking. Call customer service!
F: 34	Door cannot be locked. Open door and close it with an audible "click"; switch appliance off and on again; set programme and select individual settings; start programme.
F: 42, 43, 44	Motor fault. Call customer service!



# Maintenance







- Risk of scalding! Allow detergent solution to cool down!
- Turn off the tap!

## Detergent solution pump

Set programme selector to **Off**, pull out the mains plug.

1. Open and remove service flap.
2. Take the drainage hose out of the holder. Remove sealing cap, allow detergent solution to flow out. Put the closing cap back on the hose.
3. Carefully unscrew the pump cover (residual water).
4. Clean the interior, pump cover thread and pump housing (fan impeller in the detergent solution pump must rotate).
5. Re-insert pump cover and screw on tight, handle is upright. Insert the drain hose into the holder.
6. Insert and close service flap.

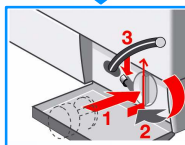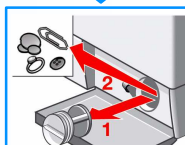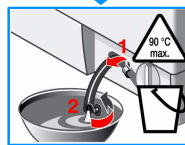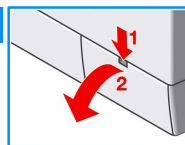

To prevent unused detergent from flowing into the outlet during the next wash: Pour 1 litre of water into dispenser II and start the **Drain** programme.

## Filter in the water inlet hose




**Risk of electric shock!** Do not immerse Aqua-Stop safety device in water (contains electric valve).

Release water pressure in the supply hose:

1. Turn off the tap!
2. Select any programme (except Spin/Drain).
3. Select **Start/Pause**. Leave programme for approx. 40 seconds.
4. Set programme selector to **Off**. Pull out the mains plug.

Clean filter:

1. Depending on model:
  - Remove hose from tap. Clean filter with small brush.
  - or
  - Remove hose from the rear. Remove filter with pliers and clean.
2. Connect the hose and check for leaks.

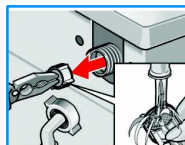


# What to do if ...

- Water is running out.
  - Correctly attach/replace drainage hose.
  - Tighten screw-fitting on the supply hose.
- Water not flowing in. Detergent not washed in.
  - **Start/Pause** not selected?
  - Tap not open?
  - Filter blocked? Clean filter -> Page 10.
  - Supply hose kinked or jammed?
- Washing machine door cannot be opened.
  - Safety function active. Wait approx. 2 minutes.
  - **Rinse Hold** (without final spin) selected? -> Page 4.
  - Can be opened via emergency release only -> Page 12.
- Programme does not start.
  - **Start/Pause** or **End time** selected?
  - Washing machine door closed?
- Detergent solution is not drained.
  - Clean detergent solution pump -> Page 10.
  - Clean outlet pipe and/or drainage hose.
- Water not visible in the drum.
  - Not a fault - water below the visible area.
- Spin result not satisfactory.
  - Wash small and large items of washing together.
  - **Reduced Iron** selected? -> Page 5.
  - Too low speed selected? -> Page 3.
- Spin cycle actuated several times.
  - Not a fault - unbalanced load detection system adjusts imbalance.
- Dispenser not completely rinsed out.
  - Remove the insert. Clean detergent drawer and insert -> Page 9.
- Odour formation in the washing machine.
  - Run **Cottons 90 °C** programme without washing. Use standard detergent.
- Foam is coming out of the detergent drawer.
  - Too much detergent used? Mix 1 tablespoon of fabric conditioner with ½ litre of water and pour into dispenser II in the detergent drawer.
  - Reduce detergent dosage for the next wash cycle.
- Intense noise formation, vibrations and "wandering" during spin cycle.
  - Appliance feet fixed? Secure appliance feet -> Installation instructions, Page 5.
  - Transportation safety devices removed? Remove transportation protection devices -> Installation instructions, Page 3.
- Display panel/indicator lights do not function while the appliance is running.
  - Power failure?
  - Fuse tripped? Switch on/replace fuse.
  - If the fault occurs repeatedly, call customer service.
- Programme progress longer than usual.
  - Not a fault - unbalanced load detection system adjusts imbalance by repeatedly distributing the washing.
  - Not a fault - foam detection system active, a rinse cycle is started.
- Detergent residue on the washing.
  - Occasionally phosphate-free detergents contain water-insoluble residue.
  - Select **Rinse/Freshen Up** or brush the laundry after washing.
- In the pause state **Start/Pause** flashes very quickly and a signal sounds.
  - Water level too high. Top up washing is not possible. If required, close door immediately.
  - Select "Start/Pause" to continue the programme.
- If a fault cannot be rectified or a repair is required:
  - Set programme selector to **Off** and pull out the mains plug.
  - Turn off tap and call customer service -> Page 12.



# Emergency release

e.g. in the event of a power failure

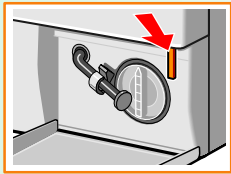

Programme continues running when the power has been restored. However, if the washing is to be removed, the door can be opened by actuating the emergency release.



*Risk of scalding!*  
The detergent solution and washing may be hot. If required, leave it to cool down. Keep hands clear of the drum if it is still rotating. Do not open the door if water can be seen through the glass.

- Turn the programme selector to **Off** and disconnect it from the power supply.
- Drain the water -> page 10.
- Pull the emergency release with a tool, the door can then be opened.

# Customer service

Before calling customer service, please check whether you can eliminate the fault yourself. -> Page 11; What to do if ...

If you require advice, even during the warranty period, you will incur costs for the call-out of a technician.

You can find your nearest customer service in the enclosed list. Please give customer service the product number (E-Nr.) and the production number (FD) of the appliance.

E-Nr. \_\_\_\_\_ FD \_\_\_\_\_

Product number      Production number

*These specifications can be found in the open service flap and on the rear of the appliance.*

Please help by quoting the product number and production number to prevent unnecessary call-outs. This will save you additional costs.



# Safety instructions

- Read and follow the operating and installation instructions and all other information enclosed with the washing machine.
- Retain documents for subsequent use.

**Risk of electric shock** - Never pull out the mains plug by tugging the power cord!  
- Never insert/pull out the mains plug with damp hands.

**Danger to life** Redundant appliances:  
- Pull out the mains plug.  
- Sever the power cord and discard together with the plug.  
- Destroy the lock on the washing machine door. This will prevent children from locking themselves in and suffocating.

**Risk of suffocation** - Keep packaging, plastic film and packaging parts out of the reach of children.

**Risk of poisoning** - Keep detergents and care products out of the reach of children.

**Risk of explosion** - Caused by detergents containing solvents, e.g. stain remover/items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine. Before hand thoroughly rinse items of washing by hand.


**Risk of injury** - Washing machine door may become very hot.  
- Caution when draining hot detergent solution.  
- Do not climb on the washing machine.  
- Do not lean on the open washing machine door.  
- Do not touch the drum in case it is still spinning.

# Consumption values

Programme	Option soiling	Load	Current**	Water**	Programme duration**
Cottons 30 °C*	intense	8.0 kg	0.61 kWh	67 l	2:02 h
Cottons 40 °C*	intense	8.0 kg	0.94 kWh	67 l	2:02 h
Cottons 60 °C	intense	8.0 kg	1.65 kWh	67 l	2:02 h
Cottons Eco 60 °C*	intense	8.0 kg	1.36 kWh	56 l	2:15 h
Cottons 90 °C	light	8.0 kg	2.42 kWh	81 l	1:50 h
Easy-Care 40 °C*	intense	3.5 kg	0.55 kWh	43 l	1:05 h
Easy-Care 40 °C (also suitable as <b>Short programme</b> )	light	3.5 kg	0.54 kWh	43 l	0:40 h
Delicate/Silk --- (cold)	light	2.0 kg	0.03 kWh	30 l	0:35 h
Delicate/Silk 30 °C	light	2.0 kg	0.20 kWh	30 l	0:35 h
Wool/ --- (cold)	-	2.0 kg	0.07 kWh	30 l	0:40 h
Wool/ 30 °C	-	2.0 kg	0.17 kWh	30 l	0:40 h

\* Programme setting with maximum spin speed for conducting test according to currently valid European Standard 60456.

\*\* The values deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilised detergent, fluctuations in the mains voltage and selected additional functions.

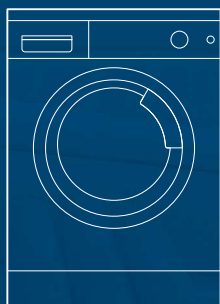

Washing machine

en

Operating instructions



**BOSCH**



Read these instructions before switching on the washing machine!  
Also follow the separate Installation instructions.  
Follow the safety instructions on page 13!